


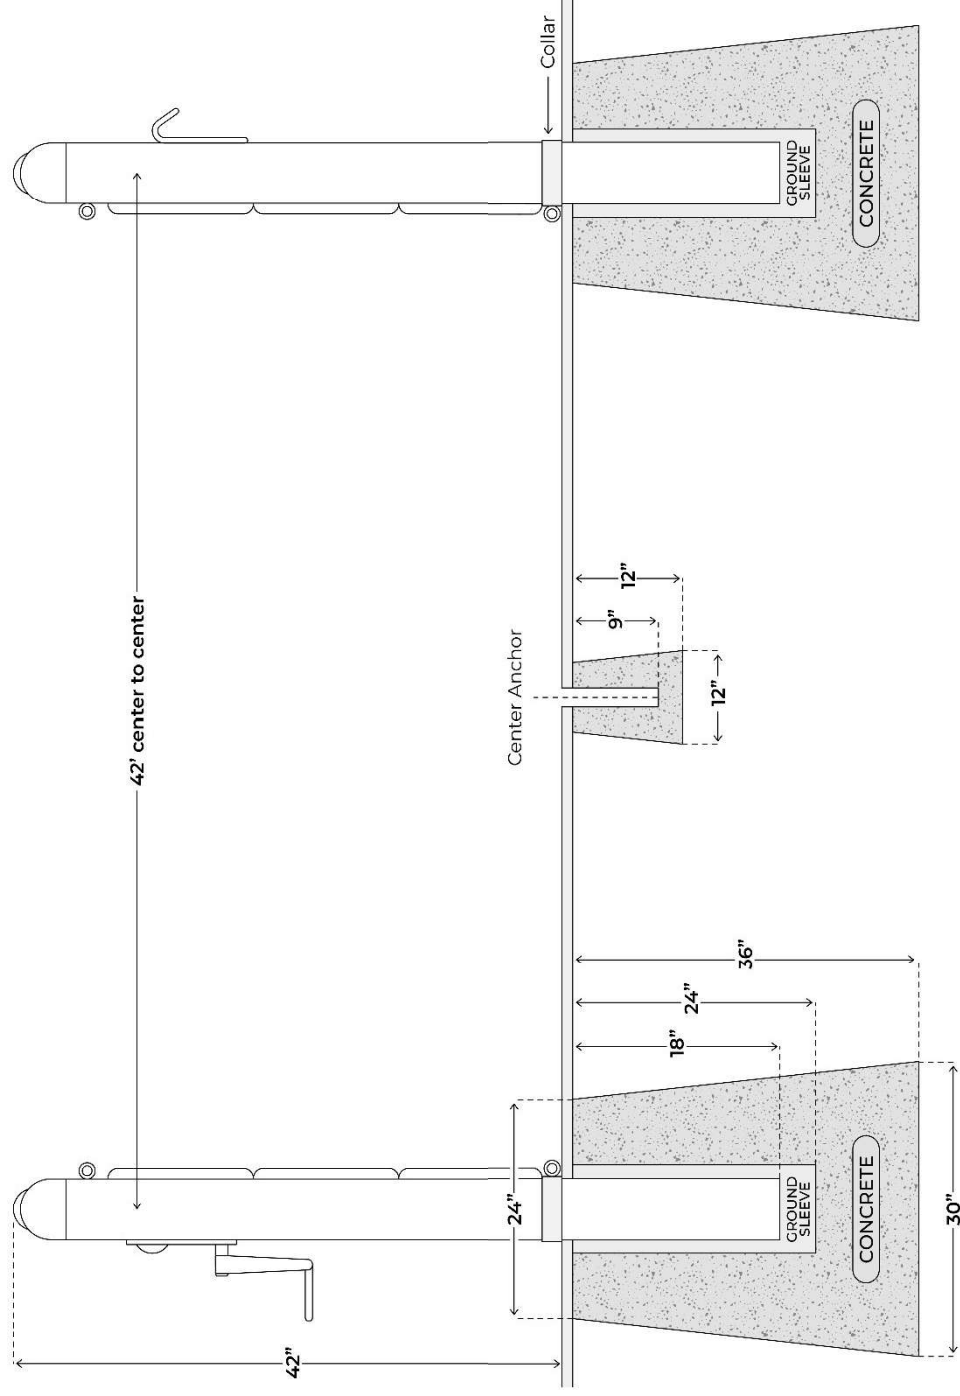

Notes:

1. These instructions can be used for net posts with internal or external winder mechanisms.
2. The ground sleeves should be set to be level with the playing surface.
3. When installing the net posts, set the collars (collars, hardware and hex key included) so that the bottom of the collar sets the height of the net posts 42" high from the playing surface (standard tennis net post height).
4. If your net posts don't have collars, the lacing rods will act as a stop, setting the net post height to the regulation height of 42" above the playing surface.

Tennis Net Installation

1. **Stretch the Net:** Lay the net out across the court.
2. **Identify Winder Type:**
 - **External Winder:** If the winder bolts to the outside of the post with a hook/peg for the cable, proceed to step 4.
 - **Internal Winder:** If the winder mechanism is mostly inside the post, go to step 3.
3. **Prepare Internal Winder Cable:** For internal winders, cut off one cable loop, initially at the base of the loop. If needed, cut off more of the cable if it is difficult to crank the net due to too much cable in the internal winding mechanism. Move onto step 4.
4. **Attach to Dummy Post:** Attach one net cable loop to the non-crank post (dummy post).
5. **Attach to Crank Post:**
 - **External Winder:** Attach the other net cable loop to the crank post.
 - **Internal Winder:** Insert the cut end of the net cable into the internal winder's hole.
6. **Crank Net:** Raise the net to approximately 38 inches high at the center.
7. **Insert Dowels:** Place the two provided dowels into the net's side tapes.
8. **Lace and Secure:** Lace the provided rope through the net's grommets and around the lacing bars and around the lacing rods, pulling the net tight against the rods. Tie off the rope at the bottom to the eyebolt or lacing rods and trim any excess. If the posts don't have collars or eyebolts, lace the net to the lacing rods.
9. **Adjust Center Strap:** Measure the net's height at the center. Secure the center strap to its anchor and adjust until the net is 36 inches high at the court's centerline.

Your net is now installed!

